Digital Pocket Memo

LFH 9370/00

For product information and support, visit
www.philips.com/dictation

EN	User manual	3	ES	Manual del usuario	65
DE	Benutzerhandbuch	23	NL	Gebruikershandleiding	85
FR	Manuel de l'utilisateur	45	IT	Manuale di istruzioni	107

PHILIPS

The CE mark confirms that the device corresponds to the relevant guidelines of the European Union.

The cardboard used for packaging can be recycled. This electronic device contains recyclable material.

User manual

ENGLISH

1	**Welcome**	**4**
1.1	Product highlights	4
1.2	What's in the box	4
2	**Important**	**5**
2.1	Safety	5
2.2	Disposal of your old product	5
2.3	Technical support and warranty	5
3	**Get started**	**6**
3.1	Overview – controls and connections	6
3.2	Overview – display indicators and symbols	7
3.3	Install the batteries	8
3.4	Insert and eject the memory card	8
3.5	Format a new memory card	9
3.6	Activate the Digital Pocket Memo	9
3.6.1	Set the language	9
3.6.2	Set the date and time	10
3.7	Power-save mode	10
4	**Using your Digital Pocket Memo**	**11**
4.1	Record	11
4.1.1	Create a new recording	11
4.1.2	Review recording	12
4.1.3	Add to a recording (insert)	12
4.1.4	Finish (lock) a recording	13
4.1.5	Change the recording format	13
4.1.6	Adjust the microphone sensitivity	14
4.2	Playback	14
4.2.1	Overview playback functions	15
4.3	Delete	15
4.3.1	Delete a file	15
4.3.2	Delete part of a recording	16
4.3.3	Delete all dictations	16
5	**Use more of your Digital Pocket Memo**	**17**
5.1	Use Philips SpeechExec software	17
5.1.1	Advanced configuration	17
5.1.2	Download recordings to the PC	17
5.2	Menu settings	18
5.3	Use voice-activated recording	19
5.4	Work with index marks	20
5.4.1	Insert an index mark	20
5.4.2	Delete an index mark	20
5.4.3	Delete all index marks	20
5.5	Assign an author's name	21
5.6	Use rechargeable batteries	21
5.6.1	Recharge the batteries using the Philips power supply	21
5.6.2	Recharge the batteries through the docking station	21
6	**Technical data**	**22**

1 Welcome

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, visit our Website for support information such as user manuals, software downloads, warranty information and more: www.philips.com/dictation.

1.1 Product highlights

- The Digital Pocket Memo's asymmetrical and ergonomic design delivers unparalleled user-friendly operation. The push button switch allows quick control and single handed operation.
- Two smart buttons let you scroll through menu options and quickly make selections.
- A large graphical display lets you view all file information, such as keywords (author name), length of dictation, position within the file, and other vital information at a glance. A backlit display shows all information, even in poor lighting conditions.
- The Digital Pocket Memo is designed around standardized technologies. From SD (or MMC) cards, mini-USB cables, batteries and sockets to the industrystandard .dss file format for speech processing, Philips employs non-proprietary accessories and technologies for the ultimate compatibility.
- The .dss file format is the international standard for professional speech processing. Offering excellent audio quality for recorded voice, .dss files allow a high compression rate, reduced file sizes, network traffic and required storage capacity. The format also allows additional information, such as the author name, to be stored in the file header, further facilitating file organization.
- SpeechExec Dictate is the perfect download software to manage voice files. The intuitive user interface makes job retrieval simple and fast, and the job status information allows the tracking of all the work in progress.

1.2 What's in the box

Digital Pocket Memo

CD-ROM

Pouch

Mini USB cable

Batteries

SD memory card

Quick start guide, user manual

2 Important

2.1 Safety

- To avoid short circuit, do not expose the product to rain or water.
- Do not expose the device to excessive heat caused by heating equipment or direct sunlight.
- Protect the cables from being pinched, particularly at plugs and the point where they exit from the device.
- Back up your files. Philips is not responsible for any loss of data.

2.2 Disposal of your old product

- Your product is designed and manufactured with high quality materials and components, that can be recycled and re-used.
- When this crossed-out wheeled bin symbol is attached to a product, it indicates that the product is covered by the European Directive 2002/96/EC.

- Please become informed about the local separate collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of old products with your normal household waste. The correct disposal of old products will help prevent potential negative consequences for the environment and human health.
- Batteries (including built-in rechargeable batteries) contain substances that may pollute the environment. All batteries should be disposed of at an official collection point.

2.3 Technical support and warranty

This Philips product was designed and manufactured to the highest quality standards. If your Philips product is not working correctly or is defective, contact your supplying Philips Speech Processing dealer who will provide you with the necessary information on how to proceed.

If you have questions that your dealer cannot answer or any other related question, visit www.philips.com/dictation to contact us.
No components are user-serviceable. Do not open or remove covers and do not insert objects not suitable for the specific connectors. Repairs may be made only by Philips service centers and official repair facilities. Failure to do so will void any warranty, stated or implied. Any operation expressly prohibited in this manual, any adjustments, or assembly procedures not recommended or authorized in this manual will void the warranty.

3 Get started

3.1 Overview – controls and connections

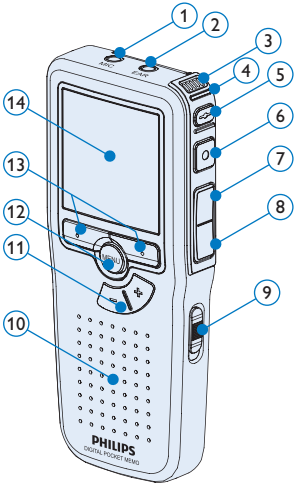

1. Microphone socket
2. Earphone socket
3. Built-in microphone
4. Status LED (red = record, green = insert, yellow = file transfer)
5. EOL (end-of-letter) button
6. REC (Record) button
7. REW (Rewind) button
8. FWD (Forward) button
9. On/off switch
10. Speaker
11. Volume control, plus/minus and menu navigation buttons
12. Menu button
13. Smart buttons
14. Display

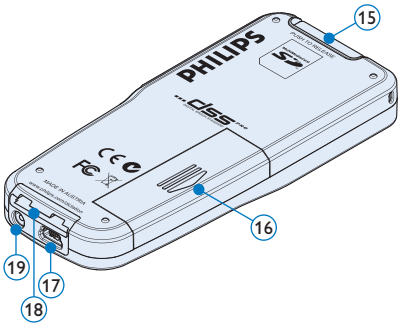

15. Slot to insert Secure Digital (SD)/ Multimedia (MMC) card
16. Battery compartment
17. USB connection slot
18. Docking station connection slot
19. Power supply connection slot

3.2 Overview – display indicators and symbols

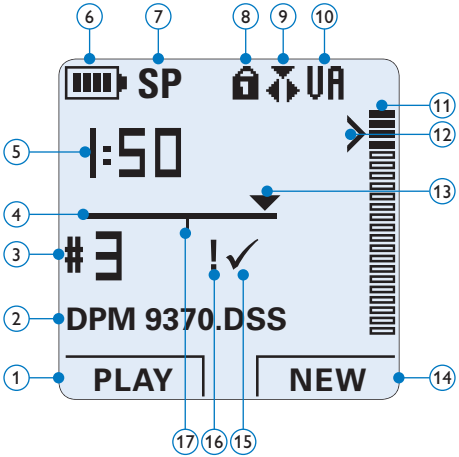

1. Current function of the left smart button
2. File name
3. Recording number
4. Position bar
5. Recording position (minutes : seconds)
6. Battery level indicator
7. Recording mode (SP = Standard Play / LPm = Long Play mobile)
8. Memory card is write-protected (locked)
9. Insert recording mode is activated
10. Voice-activated recording in progress
11. Recording volume indicator
12. Sensitivity level for voice-activated recording
13. Current position in the recording
14. Current function of the right smart button
15. Recording is marked finished (EOL) and locked
16. Recording is marked priority
17. Recording contains index mark

3.3 Install the batteries

The Digital Pocket Memo can be operated with the two AAA batteries delivered with the product. Philips rechargeable batteries may also be used. See *Use rechargeable batteries* on page 21 for more information.

1. The on/off switch of the Digital Pocket Memo must be in the OFF position.
2. Open the battery compartment on the back side of the Digital Pocket Memo by sliding it outwards then folding it up.
3. Insert the two AAA batteries. The correct polarity is indicated on the inside of the battery compartment cover. (1) (2)
4. Close the battery compartment by folding it back and sliding the battery compartment cover inside until it clicks.

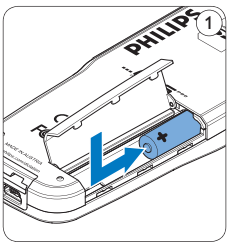

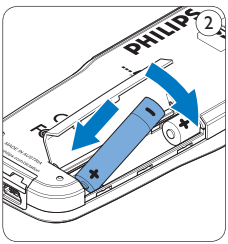

Note

Do not mix battery types! Use two rechargeable batteries or two non-rechargeable alkaline batteries.

3.4 Insert and eject the memory card

The Digital Pocket Memo operates with an SD (Secure Digital) memory card and supports SD cards with storage capacities of up to 2 GB.

Your Digital Pocket Memo is packaged with a memory card already inserted and formatted.

To eject the memory card:

1. Locate the memory card slot on the top back side of the Digital Pocket Memo.
2. Press the memory card in the Digital Pocket Memo until it clicks. (1)
3. Release the memory card. It will slightly emerge from the memory card slot. Simply slide it out.

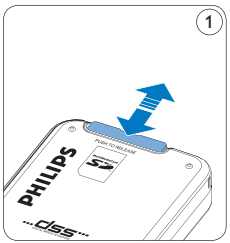

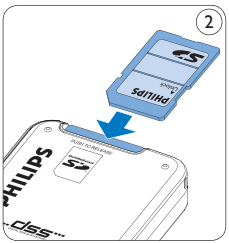

To insert a memory card:

1. Locate the memory card slot on the top back side of the Digital Pocket Memo.
2. Slide the memory card into the slot. A small illustration under the memory card slot indicates the correct orientation. (2)
3. Push the memory card in until you hear a click.

Note

If the Digital Pocket Memo is turned to the ON position and there is no memory card inserted, a warning screen is displayed.

The memory card that is packaged with the Digital Pocket Memo is already formatted and ready for use. If a memory card is inserted that is not formatted, the Digital Pocket Memo will offer the option to format it. Refer to the next chapter for more information.

3.5 Format a new memory card

When a new, unformatted memory card (or a memory card that was formatted with a non-Digital Pocket Memo device) is inserted, the Digital Pocket Memo will display a prompt to format the memory card. To confirm and start the formatting process, press the OK smart button (1). To cancel the formatting process, remove the memory card or press the CANCEL smart button (2).

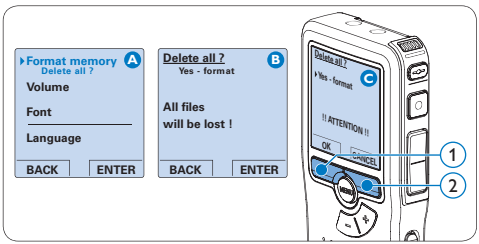

The Digital Pocket Memo will be unable to record without a properly formatted memory card. If a new card was inserted and the formatting process was cancelled, insert another card that can be formatted or has already been formatted.

Note

Formatting is not possible if the memory card is in read-only mode (locked).

3.6 Activate the Digital Pocket Memo

The Digital Pocket Memo is turned on and off by sliding the ON/OFF switch. When using it for the first time, you will be prompted to set the language, date and time.

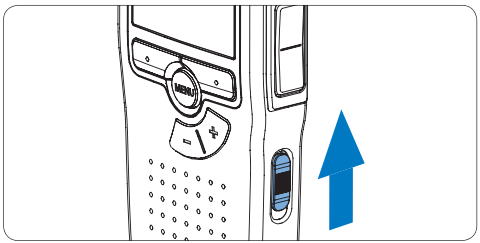

3.6.1 Set the language

When using the Digital Pocket Memo for the first time, you will be prompted to set the language.

1. Press the + or – button (1) on the Digital Pocket Memo to select a language.
2. Press the OK smart button (2) to confirm your selection. The selected language will be displayed.

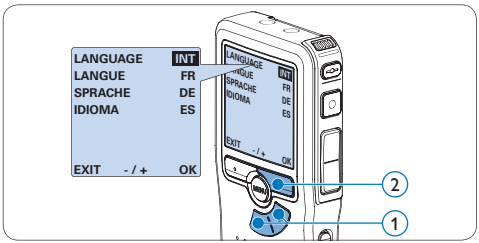

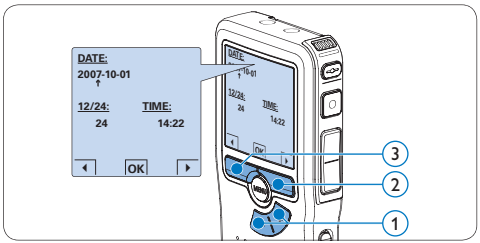

Note

It is possible to change the language later using the menu. See *Menu settings* on page 18 for more information.

3.6.2 Set the date and time

After selecting the user interface language, the Digital Pocket Memo will prompt you to set the current date and time.

1. Press the + or – button (1) repeatedly to change the value for the year, month or day.
2. Press the ▶ smart button (2) to advance the arrow (↑) to the next entry.
3. After setting the day, press the ▶ smart button (2) to advance the settings to the correct time.
4. Press the + or – button (1) to select a 12-hour or 24-hour clock, AM or PM (if a 12-hour clock is selected), and to change the value of the hour and minute settings.
5. Press the ▶ smart button (2) to confirm the date and time. The Digital Pocket Memo is now ready to function.

Note

If a mistake is made in the date/time settings, use the ◀ smart button (3) any time during the procedure to step back to make corrections. It is also possible to change the date and time later using the menu. See *Menu settings* on page 18 for more information.

3.7 Power-save mode

After four minutes of inactivity, the Digital Pocket Memo automatically goes into power-save mode and the LCD screen will display the date and time. Press any button to reactivate it.

If the Digital Pocket Memo is not used for more than two hours, it turns off completely. Turn the unit on by moving the On/Off switch to the OFF position and then back to the ON position.

4 Using your Digital Pocket Memo

4.1 Record

4.1.1 Create a new recording

Follow these steps to create a recording with the Digital Pocket Memo:

1. A memory card must be inserted into the memory card slot. See *Insert and eject the memory card* on page 8 for more information.
2. Slide the On/Off switch to the ON position to switch on the Digital Pocket Memo. (1)
3. Press the NEW smart button (2) to create a new recording.

Note

The NEW smart button is not displayed if the current recording is empty.

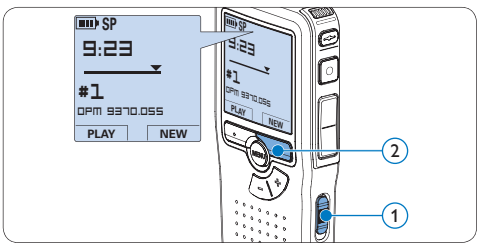

4. Press the REC button (3) and start speaking. The status LED (4) glows in red (in overwrite mode) or green (in insert mode) while recording.

   The following information is displayed:
   - (a) Recording mode
   - (b) Recording position (minutes : seconds)
   - (c) Current position in the recording
   - (d) File number
   - (e) File name

5. For short pauses, press the REC button. (3) The status LED flashes. (4) To continue recording, press the REC button again. (3)
6. To stop recording, press the STOP smart button. (5)

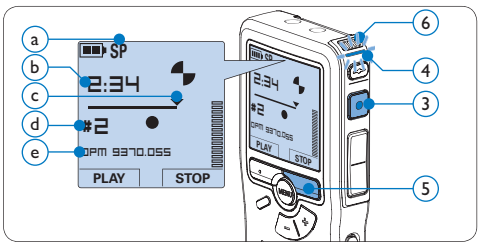

Tip

For best results, speak clearly and keep the microphone (6) about four inches (ten centimeters) away from your mouth.

4.1.2 Review recording

Press the REW button (1) briefly while recording to jump back two seconds and start playback.

Press and hold the REW button (1) while recording to rewind. Release the REW button to stop winding and start playback.

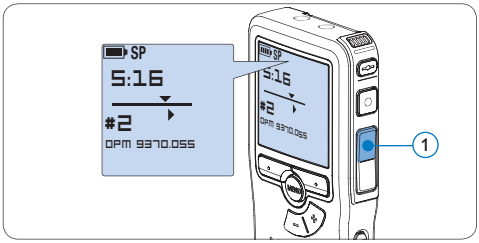

4.1.3 Add to a recording (insert)

Files are recorded in overwrite mode by default. Follow these steps to switch to insert mode to make additions to your recording:

1. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
2. Press the + or – button (2) to select the *Insert mode* menu and press the ENTER smart button (3) to enter the submenu.
3. Press the + or – button (2) to choose between *Insert* or *Overwrite* mode.
4. Press the OK smart button (4) to save the setting or press the CANCEL smart button (3) to exit the sub-menu without changing the setting.
5. Press the + or – button (2) to select the file into which the insertion should be made.

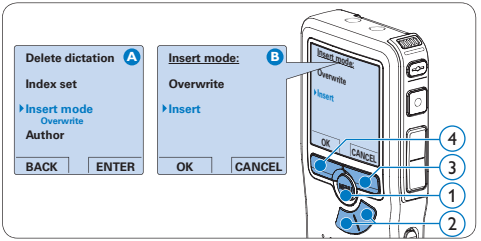

6. Play, forward or rewind to the position where the insertion should be made.
7. Press the REC button (5) and start speaking. The insertion will not overwrite the recording. The status LED (6) glows in red (in overwrite mode) or green (in insert mode) while recording.
8. Press the STOP smart button (7) to stop inserting. If the recording is not finished, simply fast forward to the end of the file and continue recording.
9. Repeat from step 1 to return to overwrite recording mode.

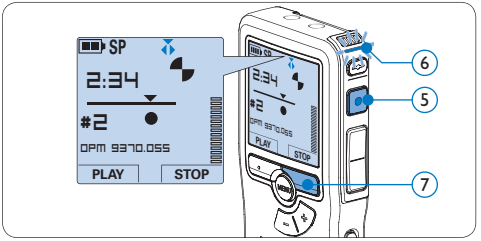

4.1.4 Finish (lock) a recording

When a recording is finished and no additional changes will be made, follow these steps to mark it as finished and protect it from being accidentally deleted:

1. Press the + or – button (1) while stopped to select the recording to be marked finished.
2. Press the end-of-letter (EOL) button (2) to lock the file and mark it as finished. The ✓ symbol is displayed.
3. To assign priority status to the recording, press the EOL button (2) again within half a second. The ! symbol is displayed, indicating that the file has priority status.
4. To make changes to the recording, press the EOL button (2) again to remove the finished mark.

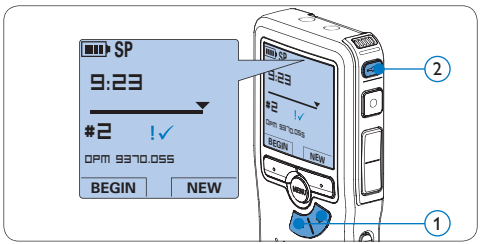

Tip

Philips SpeechExec software can be configured to download files from the Digital Pocket Memo to the PC that are marked finished only.

Caution

Locked files are deleted when the memory card is formatted or the delete-all-dictations function is used.

4.1.5 Change the recording format

The recording format determines the audio quality of your recordings and affects the number of audio files that can fit on the memory card.

The Digital Pocket Memo supports the following recording formats:

- Standard Play (SP) requires 1 megabyte for 10 minutes of recording.
- Long Play mobile (LPm) requires 1 megabyte for 15 minutes of recording.

1. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
2. Press the + or – button (2) to select the *Setup* menu item and press the ENTER smart button. (3)
3. Press the + or – button (2) to select the *Record format* menu item and press the ENTER smart button (3).
4. Press the + or – button (2) to choose between *SP* and *LPm*.
5. Press the OK smart button (4) to save the setting or press the CANCEL smart button (3) to exit the sub-menu without changing the setting.

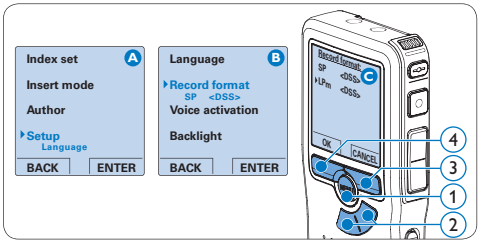

4.1.6 Adjust the microphone sensitivity

Set the microphone sensitivity for the environment and your recording preferences.

1. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
2. Press the + or – button (2) to select the *Setup* menu item and press the ENTER smart button (3).
3. Press the + or – button (2) to select the *Microphone* menu item and press the ENTER smart button (3).
4. Press the + or – button (2) to choose the microphone sensitivity: *Private* (low), *Dictate* (medium) and *Conference* (high).
5. Press the OK smart button (4) to save the setting or press the CANCEL smart button (3) to exit the sub-menu without changing the setting.

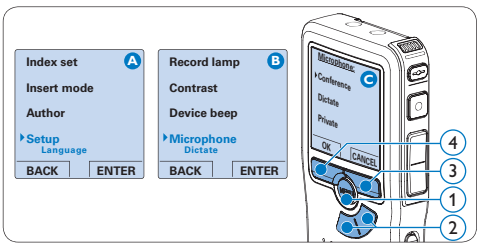

4.2 Playback

1. Press the + or – button (1) while stopped to select the recording to play back.
2. Press the PLAY smart button (2) to start playback.

   The following information is displayed:
   - (a) Current position in the dictation
   - (b) Playback position (minutes : seconds)
   - (c) Recording mode
   - (d) File number
   - (e) File name

3. Press the + or – button (1) to adjust the playback volume during playback.
4. Press the SPEED smart button (3) to adjust faster or slower file playback.
5. Press the STOP smart button (2) to stop playback.

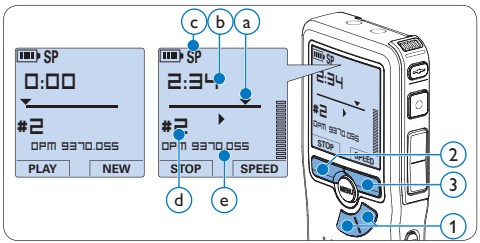

4.2.1 Overview playback functions

Fast rewind	Press the REW button (1) briefly while stopped. Press the STOP smart button (3) to stop winding or the PLAY smart button (4) to stop winding and start playback.
Fast forward	Press the FWD button (2) briefly while stopped. Press the STOP smart button (3) to stop fast forward or the PLAY smart button (4) to stop fast forward and start playback.
Rewind	Press and hold the REW button (1) while playing or recording. Release the REW button to start playback.
Cue	Press and hold the FWD button (2) while playing or recording. Release the FWD button to start playback.
Auto-backspace	Press the REW (1) button briefly while playing or recording to recap the last second and start playback.

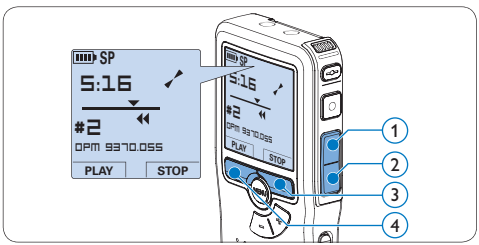

4.3 Delete

Note

Before deleting a file, make sure that it is not marked finished and that the memory card is not set to read-only (locked). If the file is marked finished, unlock it by pressing the EOL button once.

4.3.1 Delete a file

Follow these steps to delete a file entirely:

1. Press the + or – button (1) while stopped to select the file to be deleted.
2. Press the MENU button (2) to open the Digital Pocket Memo menu. The *Delete dictation* menu item is selected.
3. Press the ENTER smart button (3) to enter the sub menu.
4. Press the OK smart button (4) to delete the file permanently. Press the CANCEL smart button (3) to cancel the operation and leave the recording intact.

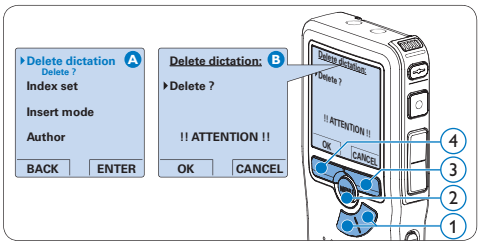

4.3.2 Delete part of a recording

Follow these steps to delete a section from a recording:

1. Navigate to the beginning of the section to be deleted by playback or forward/rewind.
2. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
3. Press the + or – button (2) to select the *Delete section* menu item and press the OK smart button (3).
4. Press the MARK 1 smart button (4). A cross symbol appears on the screen.

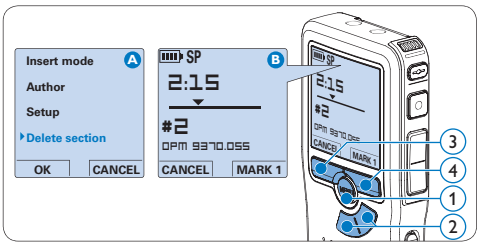

5. Find the second mark position by playback or forward / rewind and press the MARK 2 smart button (5). The second cross appears.
6. Press the DELETE smart button (5) and the OK smart button (6) to confirm the deletion of the marked section, or press the CANCEL smart button to exit without deleting.

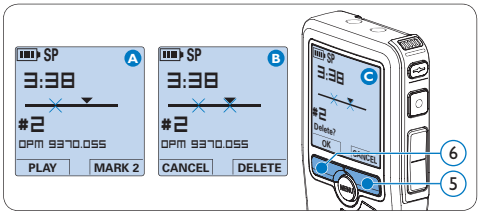

4.3.3 Delete all dictations

Caution

Files marked finished (EOL) are deleted when the delete-all-dictations function is used.

Follow these steps to delete all recordings:

1. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
2. Press the + or – button (2) to select the *Setup* menu item and press the ENTER smart button (3).
3. Press the + or – button (2) to select the *Delete dictations* menu item and press the ENTER smart button (3).
4. Press the ENTER smart button (3) and the OK smart button (4) to confirm the deletion, or press the CANCEL smart button (3) to exit without deleting.

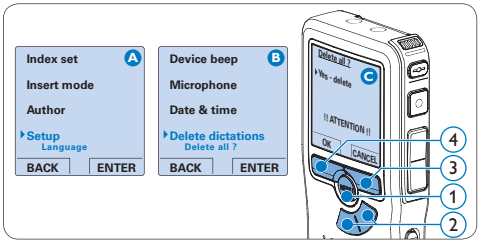

5 Use more of your Digital Pocket Memo

5.1 Use Philips SpeechExec software

Philips SpeechExec software can be used for advanced configuration of the Digital Pocket Memo and automatic download, conversion and routing of dictation files.

Note

For detailed information about *SpeechExec* software, refer to the SpeechExec quick reference guide.

5.1.1 Advanced configuration

The Digital Pocket Memo Configuration Wizard is part of the *Philips SpeechExec* Dictate software and guides users through the device configurations and settings of their Digital Pocket Memo. The wizard assists users in configuring the time format, sound feedback, voice-activated recording, display appearance (standard or advanced display mode), the recording format, microphone sensitivity, author names, and file download to the PC.

1. Connect the Digital Pocket Memo to the PC using a USB cable.
2. Start *Philips SpeechExec Dictate* software.
3. Click Settings > General Settings on the menu bar of SpeechExec to open the settings menu and select DPM/DT Configuration > DPM Wizard from the list on the left side.
4. Click the Start Wizard... button to open the wizard. Follow the on-screen instructions to customize the Digital Pocket Memo.
5. Click the Finish button to close the wizard and confirm the transfer of the new settings to the Digital Pocket Memo.

Note

When the Digital Pocket Memo is connected to the PC for the first time, Windows detects the new hardware and automatically installs the required drivers. When the installation is complete, Windows may prompt you to restart the PC.

5.1.2 Download recordings to the PC

With USB mass storage support, the Digital Pocket Memo is automatically displayed as an external drive when it is connected to the computer. It can then be accessed easily with any Microsoft Windows program as a regular drive.

Use *Philips SpeechExec* software for automatic download, conversion and routing of files.

1. Make a recording with the Digital Pocket Memo.
2. Start *Philips SpeechExec Dictate* software.
3. Connect the Digital Pocket Memo to the PC using the USB cable or the optional USB docking station.
4. By default, the recordings on the Digital Pocket Memo will be downloaded automatically to the PC and moved to the *Finished dictations* folder of the worklist.

Note

How and which files are downloaded after a Digital Pocket Memo is connected can be configured in the settings menu of *SpeechExec* or with the Configuration Wizard.

5.2 Menu settings

To access the Digital Pocket Memo menu:

1. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
2. Press the + or – button (2) to select the next/previous menu item.
3. Press the ENTER smart button (3) or the MENU button (1) to enter a submenu. Press the BACK smart button (4) to exit the menu.
4. Press the + or – button (2) to select a function.
5. Press the OK smart button (4) to confirm a selection or the CANCEL smart button (3) to exit a sub-menu without changing a setting.

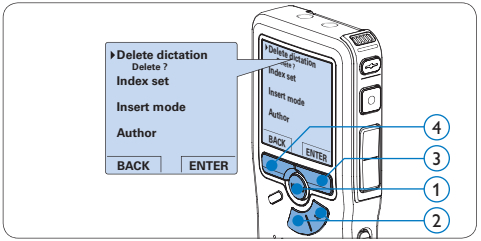

The menu offers the following options:

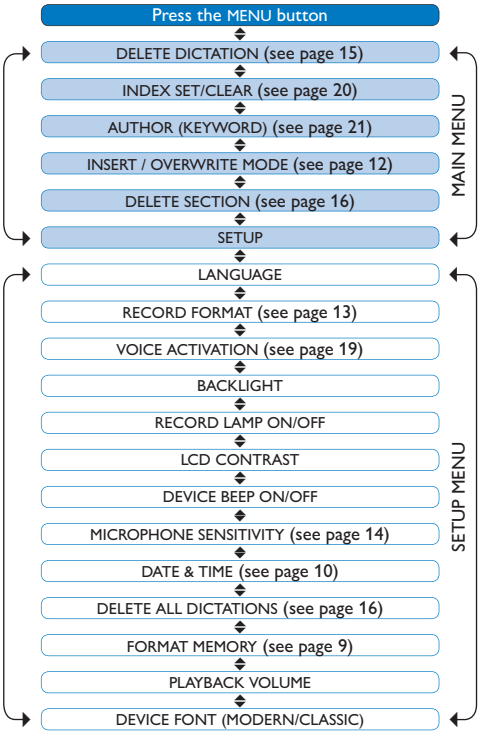

Note

- Some settings, such as defining author names or switching to simple display mode, are available only through *Philips SpeechExec Dictate*. See *Advanced configuration* on page 17 for more information.
- Press and hold the MENU button for a few seconds to access additional information about files, the device and the memory card.

5.3 Use voice-activated recording

Voice-activated recording is a convenience feature for hands-free dictation. When voice activated recording is enabled, recording will start when you begin speaking. When you stop speaking, the Digital Pocket Memo will automatically pause recording after three seconds of silence, and resume only when you begin speaking again.

1. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
2. Press the + or – button (2) to select the *Setup* menu item and press the ENTER smart button (3).
3. Press the + or – button (2) to select the *Voice activation* menu item and press the ENTER smart button (3).
4. Press the + or – button (2) to choose *Off* or *On*.
5. Press the OK smart button (4) to save the setting or press the CANCEL smart button (3) to exit the sub-menu without changing the setting.

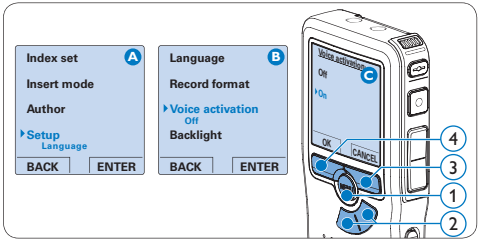

6. Press the REC button (5) and start speaking. The status LED (6) glows in red (in overwrite mode) or green (in insert mode) while recording. When the sound level is below the threshold sound level (a), recording pauses after three seconds and the status LED flashes.
7. Press the + or – button (7) to adjust the threshold sound level (a) while recording.
8. Press the STOP smart (8) button to stop recording.

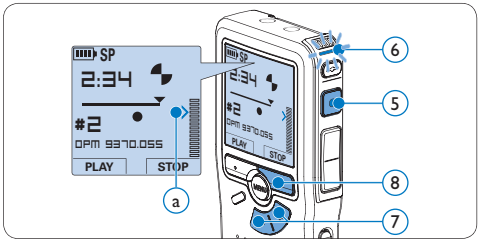

5.4 Work with index marks

Index marks can be used to mark certain points in a recording as points of reference. A point of reference may be the beginning of a major section, or a part of the recording that you may want to revise later or access quickly.

5.4.1 Insert an index mark

1. Play back, fast forward or fast rewind to the position where the index mark should be set.
2. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
3. Press the + or – button (2) to select the *Index set* menu and press the OK smart button (3).

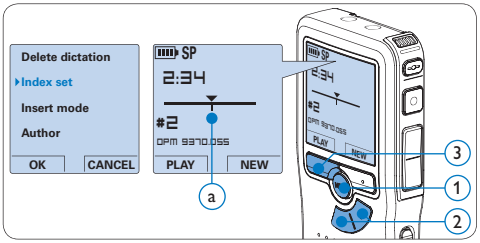

5.4.2 Delete an index mark

1. Play back, fast forward or fast rewind to the index mark to be deleted (a).
2. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
3. Press the + or – button (2) to select the *Index clear* menu and press the OK smart button (3).

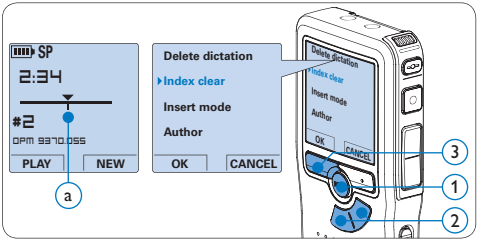

5.4.3 Delete all index marks

1. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
2. Press the + or – button (2) to select the *Delete indices* menu item and press the ENTER smart button (3).
3. Press the ENTER smart button (3) and the OK smart button (4) to confirm the deletion, or press the CANCEL smart button (3) to exit without deleting.

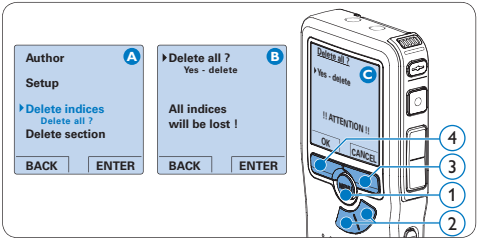

Note

The *Delete Indices* menu item is available only if the current dictation has at least one index mark.

5.5 Assign an author's name

A keyword, such as the author's name can be assigned to every recording. The keyword can be used to identify recordings and automatic file routing in *Philips SpeechExec* software.

Note

Author names must first be set up with *Philips SpeechExec* software. See *Advanced configuration* on page 17 for more information. By default, the keyword category AUTHOR with the keywords 'DPM 9370' and '- - -' (empty = default) is available on the Digital Pocket Memo.

To assign an author's name to a recording:

1. Press the MENU button (1) while stopped to open the Digital Pocket Memo menu.
2. Press the + or – button (2) to select the *Author* menu item.
3. Press the ENTER smart button (3) to display the list of names.
4. Press the + or – button (2) to select a name.
5. Press the OK smart button (4) to confirm or the CANCEL smart button (3) to exit without assigning a name.

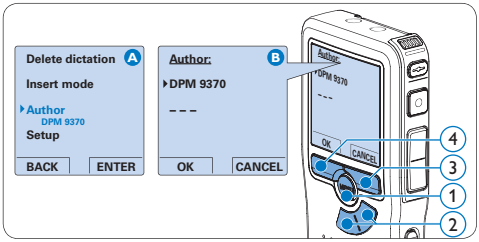

5.6 Use rechargeable batteries

The Digital Pocket Memo can be operated with *Philips Rechargeable Batteries 9154*. To recharge these batteries, use the *Philips Power Supply 9146* or the *USB Docking Station 9120*.

5.6.1 Recharge the batteries using the Philips power supply

To recharge the batteries with the Philips power supply:

1. Connect the Philips power supply to the main power supply.
2. Connect the Digital Pocket Memo to the Philips power supply.

Note

It is OK to continue using the Digital Pocket Memo during recharge. The batteries will be recharged while you work, and will continue recharging even when the Digital Pocket Memo is turned off.

5.6.2 Recharge the batteries through the docking station

When the Digital Pocket Memo is connected to the docking station, it is powered by the docking station and not by the batteries. If the Digital Pocket Memo is operated with rechargeable batteries, the batteries are automatically recharged while the Digital Pocket Memo is connected to the docking station.

6 Technical data

Connectivity
- Docking connector: 8 pin female
- USB: Mini-USB 2.0 female (full speed, 12 Mbit/s)
- DC in: 6 V
- Microphone: 3.5 mm, impedance 2 kΩ
- Earphone: 3.5 mm, impedance 8 Ω or more
- Memory card: Secure Digital (SD)/Multimedia (MMC)

Display
- Type: TFT-Transreflective
- Diagonal screen size: 44 mm / 1.71 “
- Resolution: 128 x 128 pixels
- Backlight colour: White

Recording format
- DSS (Digital Speech Standard)

Recording media
- Memory: Secure Digital (SD)/ MMC: up to 2 GB
- Recording time (SP/LPm): 44/65 hours with 256 MB card

Sampling frequency
- Standard Play mode (SP): 12 kHz
- Long Play mobile mode (LPm): 8 kHz

Compression rate
- Standard Play mode (SP): 13.5 kbit/s
- Long Play mobile mode (LPm): 9 kbit/s

Speaker
- Built-in 30 mm round dynamic speaker
- Output power: 200 mW

Power
- Battery type: two Philips AAA Ni-MH rechargeable batteries (LFH 9154) or two AAA batteries (LR03 or R03)
- Power supply (optional): 6 V DC / 850 mA

Battery life (SP mode)
- 17 hours with Philips Ni-MH rechargeable battery / 15 hours with Philips alkaline battery

Green Specifications
- Compliant to 2002/95/EC (RoHS)
- Lead-free soldered product

Operation conditions
- Temperature: 5° - 45° C / 41° - 113° F
- Humidity: 10 % - 90 %

Specifications
- Product dimensions (WxDxH): 50 x 116 x 17 mm / 2.0 x 4.6 x 0.7 “
- Weight: 106 g / 3.7 oz including batteries

Optional accessories
- USB Docking Station 9120
- Power supply 9146
- Philips Secure Digital (SD) memory card
- Headphones 334

Disclaimer and Notices

Philips performs extensive testing with the most popular configurations. However, since PC add-ons and device drivers are updated continually, conflict-free operation cannot be guaranteed.

Discover the comprehensive range of high-end dictation products from Philips
www.philips.com/dictation

Specifications are subject to change without notice.
Trademarks are the property of Royal Philips Electronics or their respective owners.
© 2008 Royal Philips Electronics. All rights reserved.
Document Version 2.0, 29/05/2008.
5103 109 9678.2